





Stöpp Calliper adapter mounting instructions.

Thank you for purchasing this Stöpp performance product. Please read these instructions carefully before attempting installation. *


Step 1: Remove adapter bolts (1). Remove cable tie (2) and disconnect plug-in connector (3). (if required) Pull off calliper-adapter combination (4+5). Remove R-clip (6), brake pad pin (7) and brake pads (8). Pull off calliper (4) from the adapter (5).

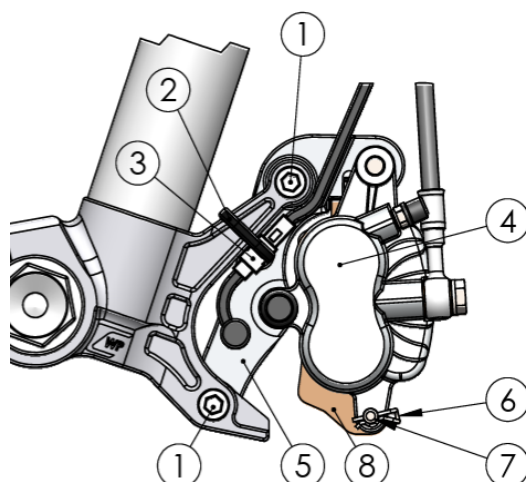

Step 2: Remove collar (9), retaining plate (10) and sliding pin (11) from original adapter (5). Mount collar (9) and retaining plate (10) on Stöpp adapter (12). Mount sliding pin (11) on Stöpp adapter (12) and tighten to 25 Nm with Loctite 243. Remove speed sensor cable from original adapter (5) and mount on Stöpp adapter (12). (if required)

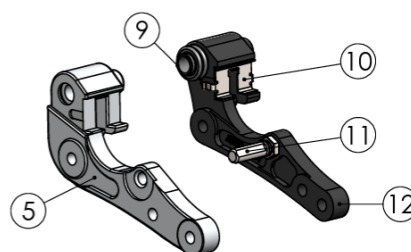

Step 3 Mount new (oversized) brake disc according to mounting instructions. (if required) Mount calliper (4) onto Stöpp adapter (12). Install brake pads (8), brake pad pin (7) and R-clip (6). Clean adapter mount contact areas. Position calliper-adapter combination (4+12), mount adapter bolts (1) and tighten to 25 Nm with Loctite 243. Use original bolts when no extra bolts are supplied in Stöpp kit. Connect plug-in connector (3) and mount cable tie (2). (if required)

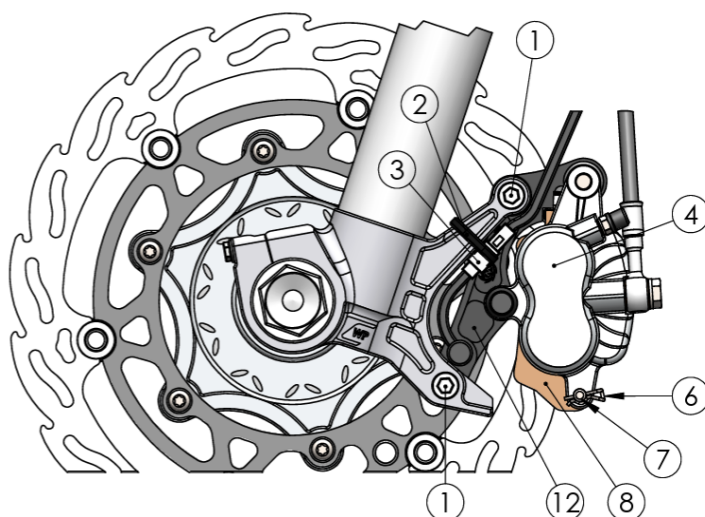

Step 4: Check for proper brake disc to calliper alignment. The brake disc should be positioned in the centre of the calliper. (From top view) Lift front wheel and operate front brake repeatedly. Check for proper engagement and release of the front brake. After releasing the brake, the wheel should spin free of drag.

Important disclaimer: Consult a certified dealer or professional mechanic if you are not fully qualified in motorcycle maintenance. Stöpp cannot be held responsible for any damage or injury caused by incorrect product mounting or disregarding specifications. And these instructions, or product mounting by an unqualified third party.

