

E13 10R-022811

Thank for purchasing an Acewell ATV/Motorcycle/Scooter computer. This manual is specially designed for the ACE-27xx/28xx series. Each model has 4-6 LED indicators. Different models have different LED indicators; a fuel meter is optional, but all other functions are the same. You may find that the photo above has a set of LED indicators different from your computer; the photo is for reference only.

PANEL DESCRIPTIONS

- | | |
|--|-------------------------------|
| 1. Bar Speed Scale | 5. RESET Button |
| 2. Bar Speed | 6. MODE Button |
| 3. 1st row display: Speedometer, Maximum Speed | 7. Fuel Meter Bar: (optional) |
| 4. 2nd row display: Other functions . | 8. LED indicator symbols |

	Left-Direction Indicator/Green		Engine Oil/Red
	Main-Beam Headlamp/Blue	N	Neutral Gear/Green
	Right-Direction Indicator/Green	R	Reverse Gear/Red
	Hazard Warning/ Red	D	Drive Gear/Green
P	Parking/Green		Engine Coolant Temperature/Red
	Direction Indicator/Green		Rear Fog Lamp/Amber
	Trailer Flashers/Green		Engine "Not In Use"/ Red

FEATURES


- Includes analog and digital tachometer, speedometer (300km/h), trip meter, odometer, clock, average speedometer, maximum speedometer, riding timer and cumulative riding timer.
- Computer unit has 4-6 built-in LEDs for different purpose indicators.
- LCD has two rows of digital and one analog bar-graphic tachometer displays, with blue LED backlight.
- Odometer and cumulative riding timer measurements are stored in memory, even when power is off.
- The computer's clock is always on, even when other functions are power-off.
- Universal wheel circumference setting range of 1-3999mm.
- Metric/ British system options.
- Waterproof design

SPECIFICATIONS

FUNCTIONS	Symbol	SPECIFICATIONS	INCREMENTS	ACCURACY
Bar Tachometer		500-12,000 rpm	500 rpm	
Digital Tachometer	RPM	100-19,900rpm	100 rpm	
Shift Warning	RPM	100-19,900rpm	100 rpm	
Maximum Tachometer	MAX RPM	100-19,900rpm	100 rpm	
Speed Meter		2.3-300KM/h (187.5M/h)	0.1 KM/H or M/H	+/-1% or +/- 0.1(KPH/MPH)
Maximum Speed Meter	MAX	MAX 2.3-300KM/h (187.5M/h)	0.1 KM/H or M/H	+/-1% or +/- 0.1(KPH/MPH)
Average Speed Meter	AVG	AVG 2.3-300KM/h (187.5M/h)	0.1 KM/H or M/H	+/-1% or +/- 0.1(KPH/MPH)
Trip Meter	TRIP 1&2	0.0-999.9 Km (624.9 Miles)	0.1 Km or Miles	+/- 0.1%
Odometer	ODO	0- 999999 Km (0.0- 624999 Miles)	1 Km or Miles	+/- 0.1%
Riding Time	RT	0.00'00"- 99:59'59"	1 Second	+/- 50PPM
Total Time	TT	9999H59'	1 Minute	+/- 50PPM
Clock		0.00'00"- 24:59'59"	1 Second/1 Minute	+/- 50PPM

Power Input: 12VDC.
 Speed Sensor: No Contact Magnetic Sensor.
 Tachometer Input: CDI or Ignition-coil signal.
 Wheel Circumference Setting: 1mm - 3999 mm (1 mm increment)
 Operation Temperature: -10° C - +80° C (inner housing)
 Storage Temperature: -25° C - +85° C (inner housing)
 Fuel Sensor Resistance: 100 Ω (For models with fuel meter only)

INSTALLATIONS & PARTS

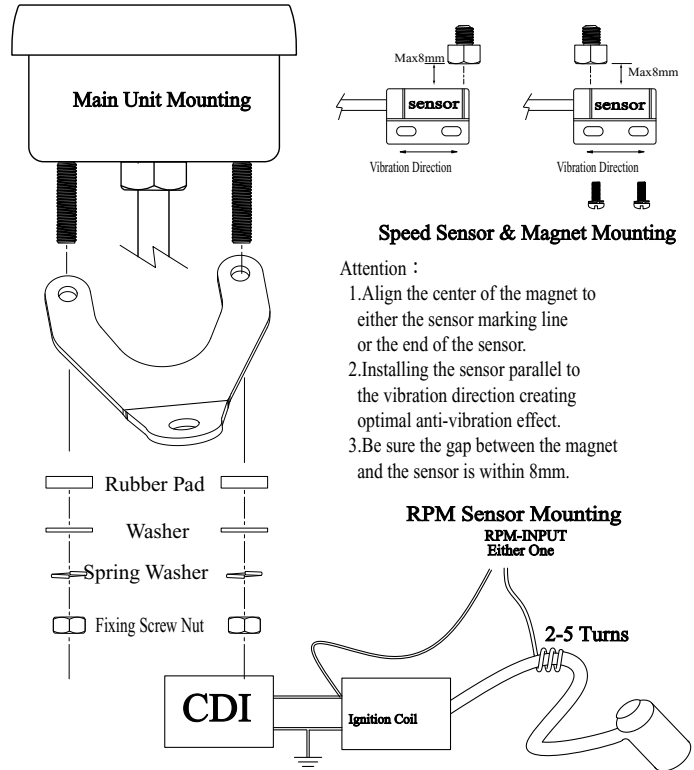

- Attention :**
- 1.Align the center of the magnet to either the sensor marking line or the end of the sensor.
 - 2.Installing the sensor parallel to the vibration direction creating optimal anti-vibration effect.
 - 3.Be sure the gap between the magnet and the sensor is within 8mm.

1. Signal intensity from ignition coil is dependent on vehicle type.
2. Circles 2-5 turns around ignition coil, with more turns creating steadily stronger signal, fewer turns creating weaker signal.

FUNCTIONS

BAR RPM: Bar Graphic Tachometer

1. The bar graphic tachometer reading is always displayed at the bar graph.
2. Tachometer bar graphic displays up to 12,000 RPM.

RPM: Digital Tachometer

1. RPM is displayed in 2nd row.
2. Digital tachometer displays up to 19,900 RPM.
3. Tachometer signal picked up from either CDI or Ignition coil.

Shift Warning RPM

1. Function enables you to set up an RPM shift warning.
2. Bar-graphic tachometer flashes when RPM reaches pre-set value, and stops flashing after you shift gear.

MAX RPM: Maximum Tachometer

1. MAX RPM is displayed on 2nd row.
2. Displays highest tachometer reading achieved after last RESET operation.

SPD: Speed Meter

1. Speed meter display is on 1st row of the screen.
2. Displays speedometer reading up to 300.0 Km/H or 187.5 mph.

MAX: Maximum Speed Meter

1. MAX is displayed on 1st row.
2. Displays highest speed achieved after last RESET operation.

AVG: Average Speed Meter

1. AVG is displayed on 2nd row.
2. Calculates average speed from last RESET.

TRIP 1 & 2: Trip Meter 1 & 2

1. TRIP function registers cumulative trip distance from last RESET while bike is being ridden.
2. Display is on 2nd row of screen.

ODO: Odometer

1. ODO registers cumulative distance traveled during motorbike operation.
2. ODO data is stored in memory, even when power is off.

RT: Riding Timer

1. Calculates total operation time from last RESET.
2. Count automatically begins with vehicle movement.

TT: Total Riding Timer

1. Calculates total operation time from the beginning of bike use.
2. Count automatically begins with vehicle movement.
3. TT data is stored in memory, even when power is off.

12/24 hour Clock

It displays 12- or 24-hour current time.

Fuel Meter (Only for models with the function)

1. Has 7 bargraphic indicator of fuel status.
2. Last bar flashes to indicate low fuel level.

